



**COMMERCIAL HEAVY DUTY
ENERGY RECOVERY VENTILATOR**

2650 SERIES

**INDOOR MODELS
AIR-ERV-2650-IF
AIR-ERV-2650-IF**

**OUTDOOR MODELS
AIR-ERV-2650-EF
AIR-ERV-2650-EF**

Installation Manual

Pre-Installation Notes



Note

- Due to ongoing research and product development, specifications, ratings, and dimensions are subject to change without notice. Refer to www.lifebreath.com for the latest product information.



Attention

- Do not apply electrical power to the unit until after the completion of the installation (including installation of low voltage control wiring).
- Ensure the installation and wiring is in accordance with all local electrical codes.
- Plug the unit into a standard designated (120 VAC) electrical outlet with ground.
- The use of an extension cord with this unit is not recommended. If the installation requires further wiring, have a licensed electrician make all the electrical connections. The recommended circuit is a separate 15 A/120 V circuit.



Caution

- Before installation, careful consideration must be given to how this system will operate if connected to any other piece of mechanical equipment, i.e. a forced air furnace or air handler, operating at a higher static. After installation, the compatibility of the two pieces of equipment must be confirmed, by measuring the airflows of the ERV, by using the balancing procedure found in this manual. Never install a ventilator in a situation where its normal operation, lack of operation or partial failure may result in the back drafting or improper functioning of vented combustion equipment
- Unit must be installed level. Due to the broad range of installation and operational conditions, consider the possibility of condensation forming on either the unit or connecting ducting. Objects below the installation may be exposed to condensate.
- Do not install control wiring alongside electrical wire.



Warning

- Disconnect the power from the unit before cleaning or servicing.
- To prevent electrical shock, it is extremely important to confirm the polarity of the power line that is switched by the safety (disconnect) switch. The hot line (black) is the proper line for switching. Use either a voltmeter or test lamp to confirm the absence of a voltage between the disconnect switch and ground (on the cabinet) while the door is open. This procedure must be followed, as dwellings are occasionally wired improperly. Always ensure the proper grounding of the unit.
- Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer or service agency.

TABLE OF CONTENTS

1	Mounting the 2650 Indoor Models.....	4
2	Mounting the 2650 Rooftop models.....	5
3	Roof Curb Assembly Instructions	6
4	Ducting the System	7
5	Dimensional Drawings	8
6	The Integrated HVAC System	9
6	The Integrated HVAC System	10
7	Stale Air Return And Fresh Air Supply System	11
8	Weatherhoods and Grilles	12
9	Function and Controls	13
10	Main Wall Controls	14
10	Main Wall Controls	15
10	Main Wall Controls	16
10	Main Wall Controls	17
10	Main Wall Controls	18
11	Timers and Repeaters	19
11	Timers and Repeaters	20
11	Timers and Repeaters	21
11	Timers and Repeaters	22
12	Aircom Relays & Interlocking to a furnace/air handler	23
13	Adjusting the Airflow	24
14	Fan Defrost.....	25
15	Balancing the Airflows	26
15	Balancing the Airflows	27
16	Service and Maintenance (2650 Units).....	28
17	Troubleshooting.....	29
17	Troubleshooting.....	30
18	Wiring Diagrams (AIR-ERV-2650IFD-208SP/AIR-ERV-2650IFD EFD-208SP)	31
19	Wiring Diagrams (AIR-ERV-2650IFD-240SP/AIR-ERV-2650IFD EFD-240SP)	32
20	Warranty	33




1 MOUNTING THE 2650 INDOOR MODELS

The ERV be in a heated space where the surrounding air temperature does not fall below 60°F (16°C). The ERV must be mounted level (horizontal) to obtain proper drainage of water from the heat exchange element and drip pans. The warranty will be void if these conditions are not met. Typically, the ERV is positioned close to an outside wall or the roof to simplify the connections and keep the length of insulated ducting required for the fresh air intake to a minimum.

A minimum clearance of 40 in. (1m) on one side of the ERV is recommended to service the heat exchanger cores and the filters.


Hanging the ERV

The ERV should be hung by a threaded rod type assembly which provides a cradle for the unit. Note that 4x4s should sit between the metal "U" channels and the unit to avoid damage to the lip of the cabinet. Mounting hardware not provided.

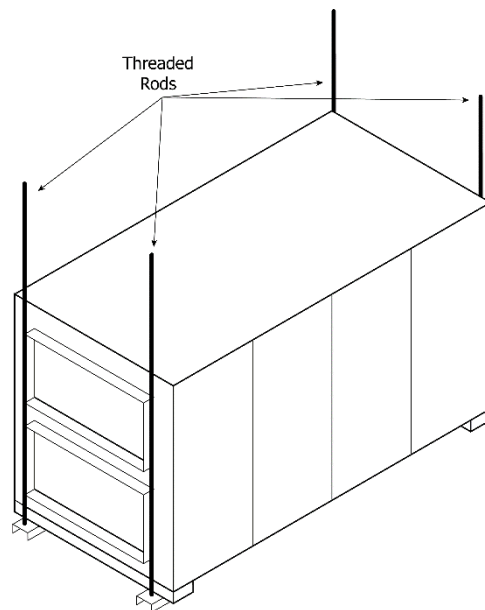

Floor Mounting the ERV


Mount the unit on wooden or metal support assembly. Raise the ERV to an adequate height and slope the drain lines. The unit may be mounted on an equipment platform providing the drain hoses are clear and there is enough space to open the doors for servicing.

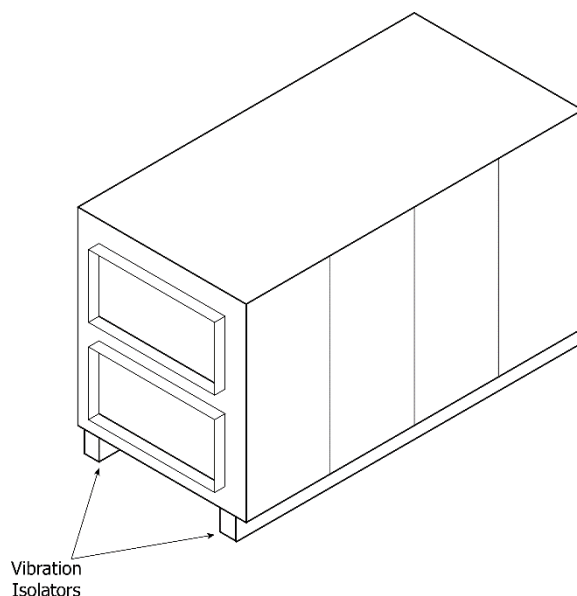

2 MOUNTING THE 2650 ROOFTOP MODELS

Roof Mount

The units are designed to be mounted outdoors, usually fastened to a roof curb assembly. A minimum clearance of 40 in. (1m) on one side of the ERV is recommended to service the heat exchanger cores and the filters.

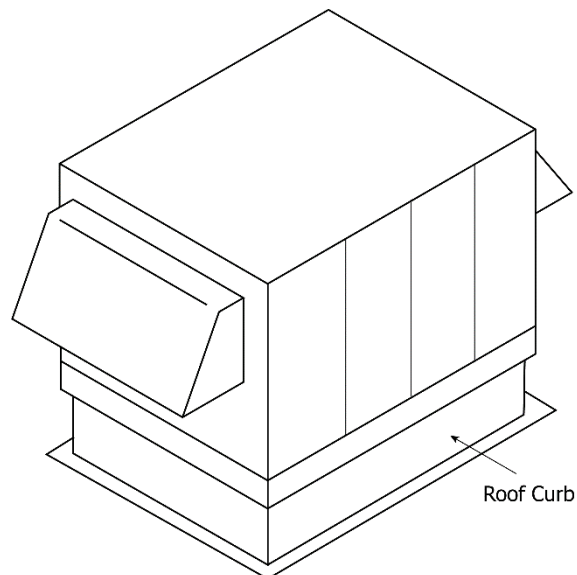


Note: Roof curb is one inch smaller than outside dimension of cabinet

Optional Roof Curb (Part No. 53-2500)

Special care and attention should be given to positioning the cross members of the roof curb, so that they line up exactly with the duct openings on the ERV.


It is also important to ensure that the perimeter of the curb is insulated, but the interior of the curb is not. This allows heat from the building to prevent freezing of the drain lines and pans.

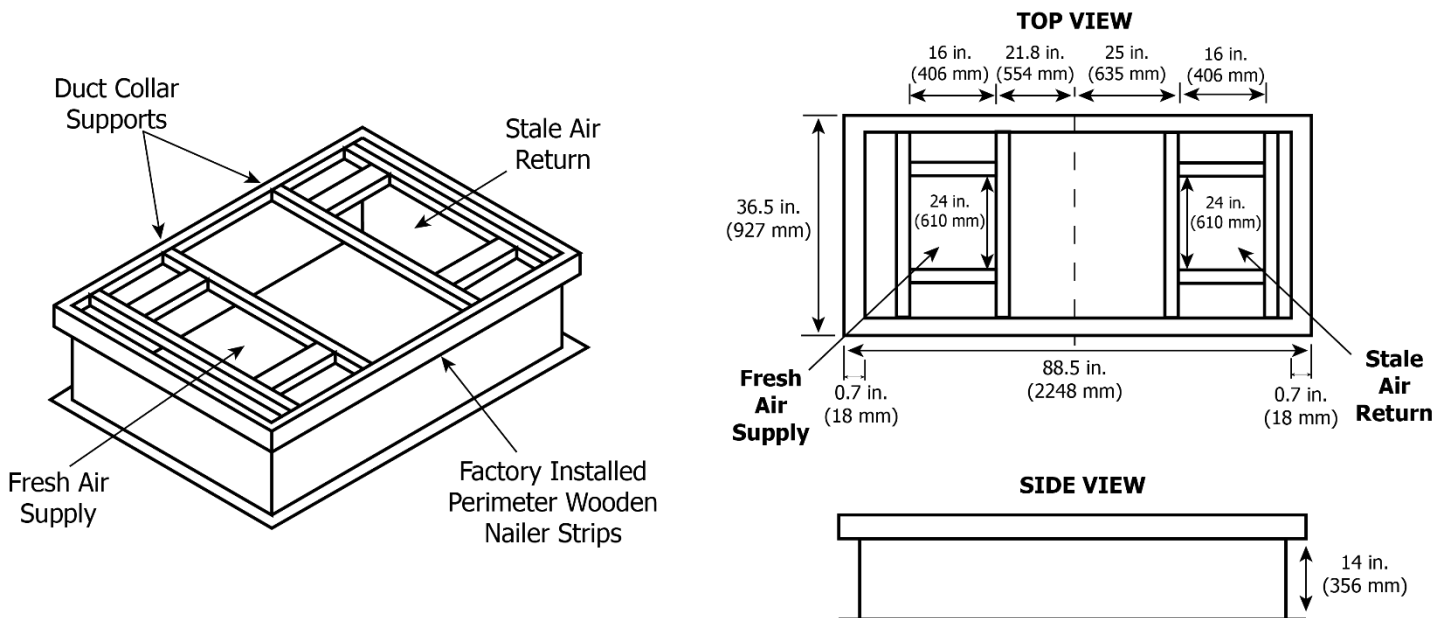

3 ROOF CURB ASSEMBLY INSTRUCTIONS

Frame Assembly

1. Stand one end piece (locking tabs) and one side piece (slots) vertically on the floor or roof.
2. Raise the corner of the end piece (locking tabs) slightly and mate with side piece (slots). Ensure that lower locking tab with leading edge is through slot opening.
3. Push down on top edge of end piece. Ensure that all 3 of the locking tabs are feeding into each corresponding slot opening. Once both pieces are flush, the process is complete.
4. Drive one spike provided into wood nailer strips at each corner.

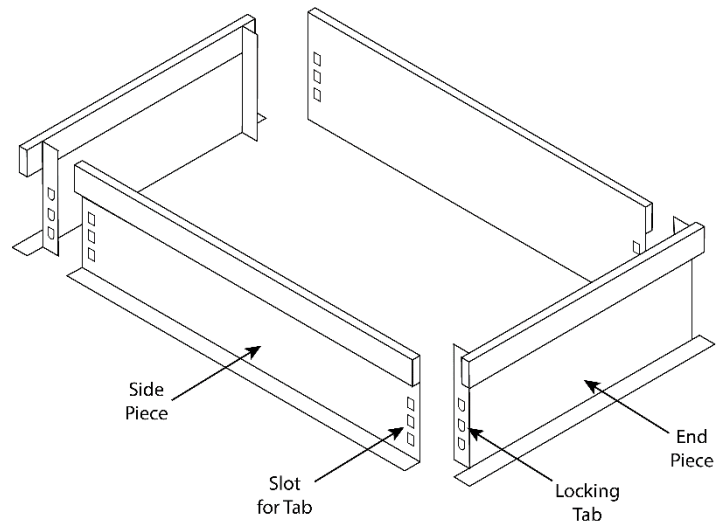


Frame Application and Location

This roof mounting frame provides necessary support when the unit is installed. The frame can be installed directly on deck having adequate structural strength or on roof supports under deck.

Securing the Frame

To ensure proper mating with unit, it is critical that mounting frame be squared to the roof, as follows:

1. With frame situated level in desired location on roof trusses, tack weld one corner of frame.
2. Measure frame diagonally from one corner to the opposite corner. Repeat with the remaining two corners. These dimensions must be equal to the frame to be square.
3. It is extremely important to sight frame from all corners to ensure that the frame is not twisted across top side. Shim frame under any low sides.
4. After frame has been squared, straightened, and shimmed, weld or attach frame securely to the roof.

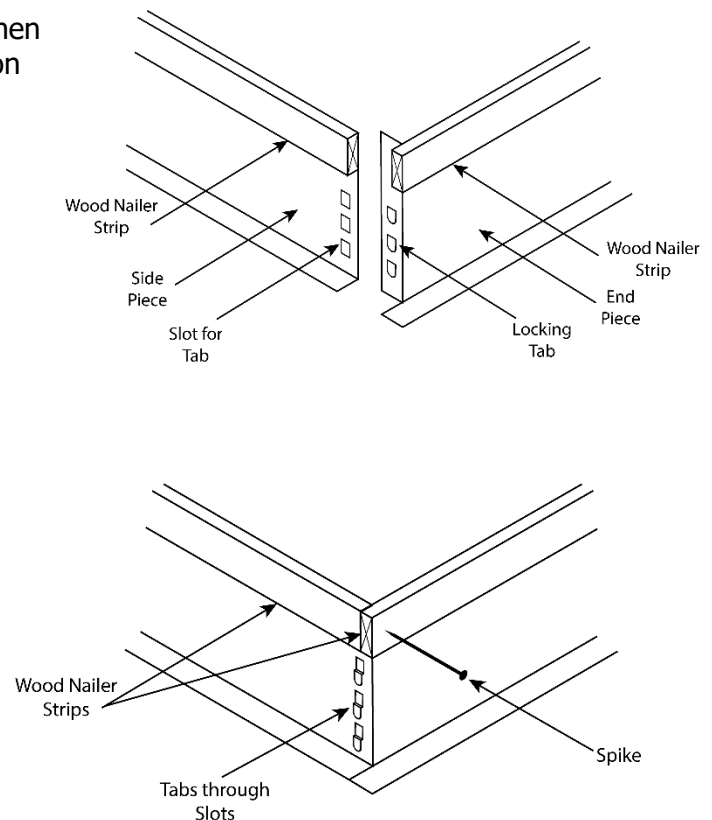

Attention

- Max. slope tolerance: 1/16 in. per linear foot in any direction
- Note specification of duct location on bottom of ERV when positioning cross members (duct cavity).

4 DUCTING THE SYSTEM

A properly designed ducting system will allow the ERV to operate at its maximum efficiency. (Air flow will be restricted by undersized ducting, use of too many elbows, tees, bends, etc.). Always try to keep duct runs as short and straight as possible.

All joints must be airtight, sealed and impervious to moisture. See [Dimensional Drawings](#) for each unit for exact duct sizes and location.

To minimize pressure drop and noise, galvanized metal ducts, properly sized, are recommended. Keep ducting as short as possible and use a minimum of elbows and tees.

Connecting sections and shorter runs may be flexible ducting one size larger than the metal equivalent. Use flexible duct connectors at the ERV to avoid noise transmission.

All duct joints must be secured with screws, rivets or duct sealant and sealed with aluminum duct tape to prevent leakage.



Attention


- Flexible duct connectors should be installed between the ERV and the galvanized ductwork.
- Use fully insulated ducting with an integral vapour barrier on all runs that pass through unheated areas to avoid condensation problems and energy losses from the air streams. Consult local codes.

5 DIMENSIONAL DRAWINGS


Airflow:

- ⇐ Stale Air to Outside
- ⇐ Fresh Air from Outside
- ⇐ Stale Air from Inside
- ⇐ Fresh Air to Inside

AIR-ERV-2650-IF Dimensions:

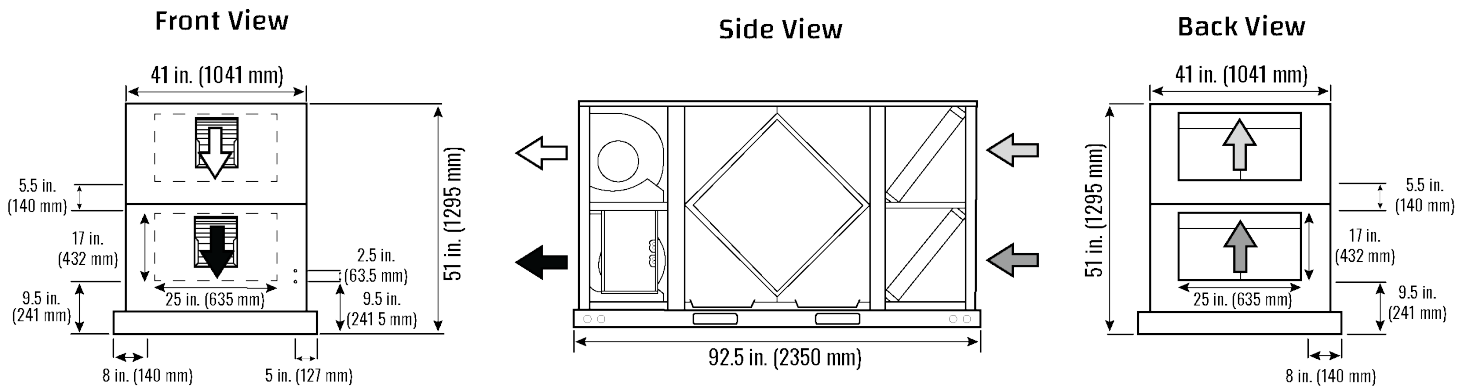

AIR-ERV-2650-EF Dimensions:

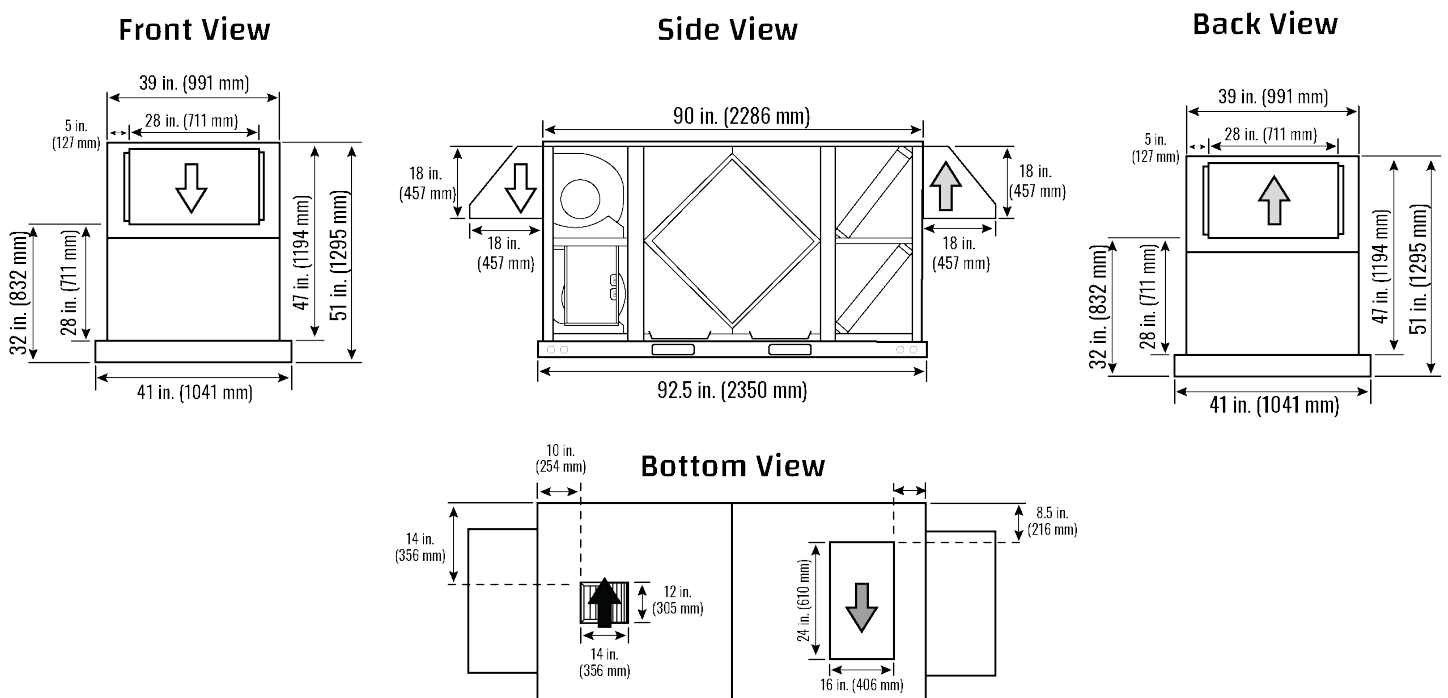

6 THE INTEGRATED HVAC SYSTEM

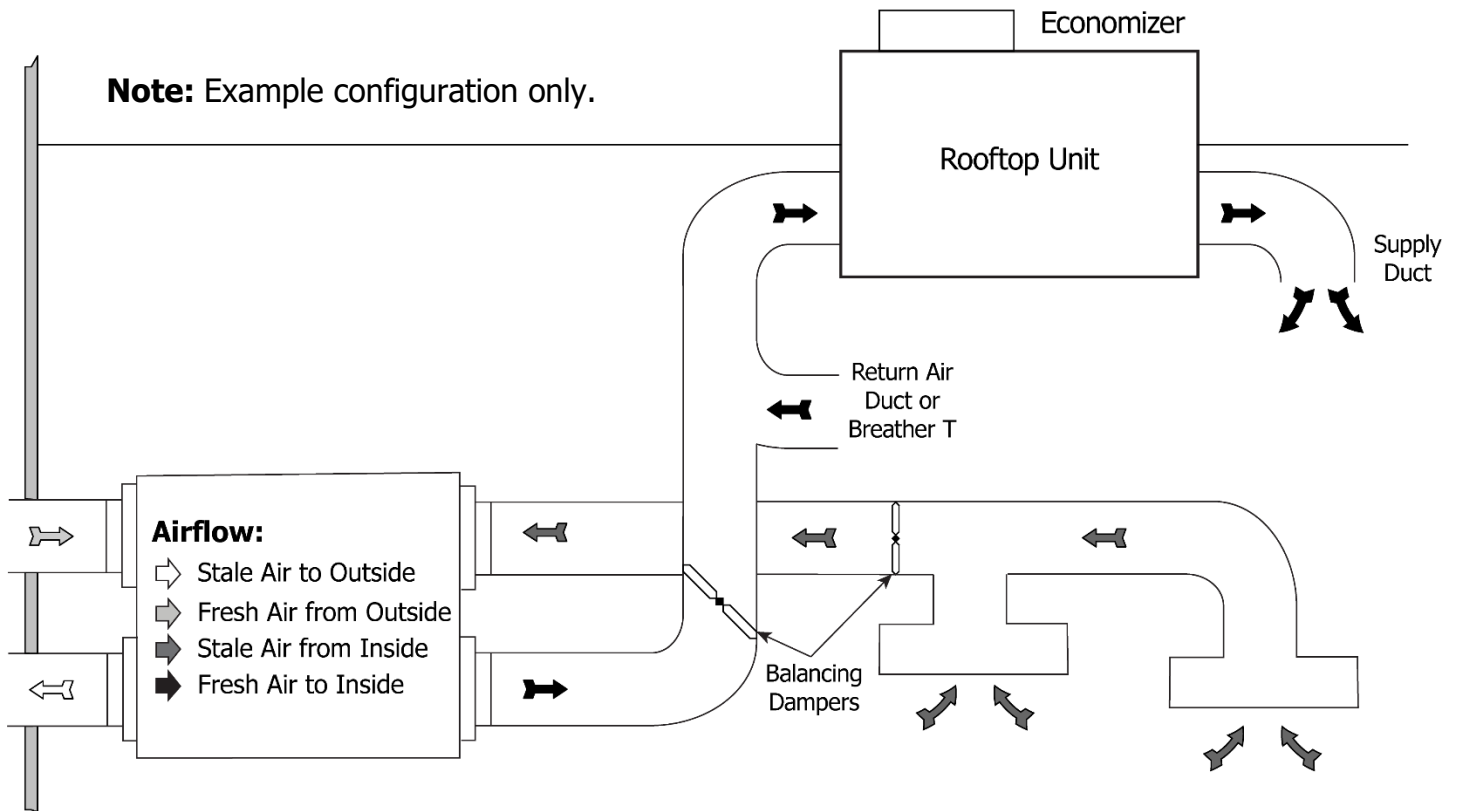


Figure A

The ERV has become an integral component of the HVAC system. Figure A shows an ERV unit providing fresh air directly to the return air plenum of a rooftop heat/cool unit.

In the balanced airflow system, the ERV exhaust removes stale room air (e.g. from lunch room, storage, or copy area) and returns to the space an equal amount of fresh outdoor air, making the use of an economizer obsolete in conjunction with an ERV.




Warning

- **At no time should the air handler Total External Static Pressure (TESP) on the return duct exceed that of the ERV.**
- **When interlocking a rooftop unit with an ERV take care to ensure the fans of both units operate in the correct rotation.**

6 THE INTEGRATED HVAC SYSTEM

Note: Example configuration only.

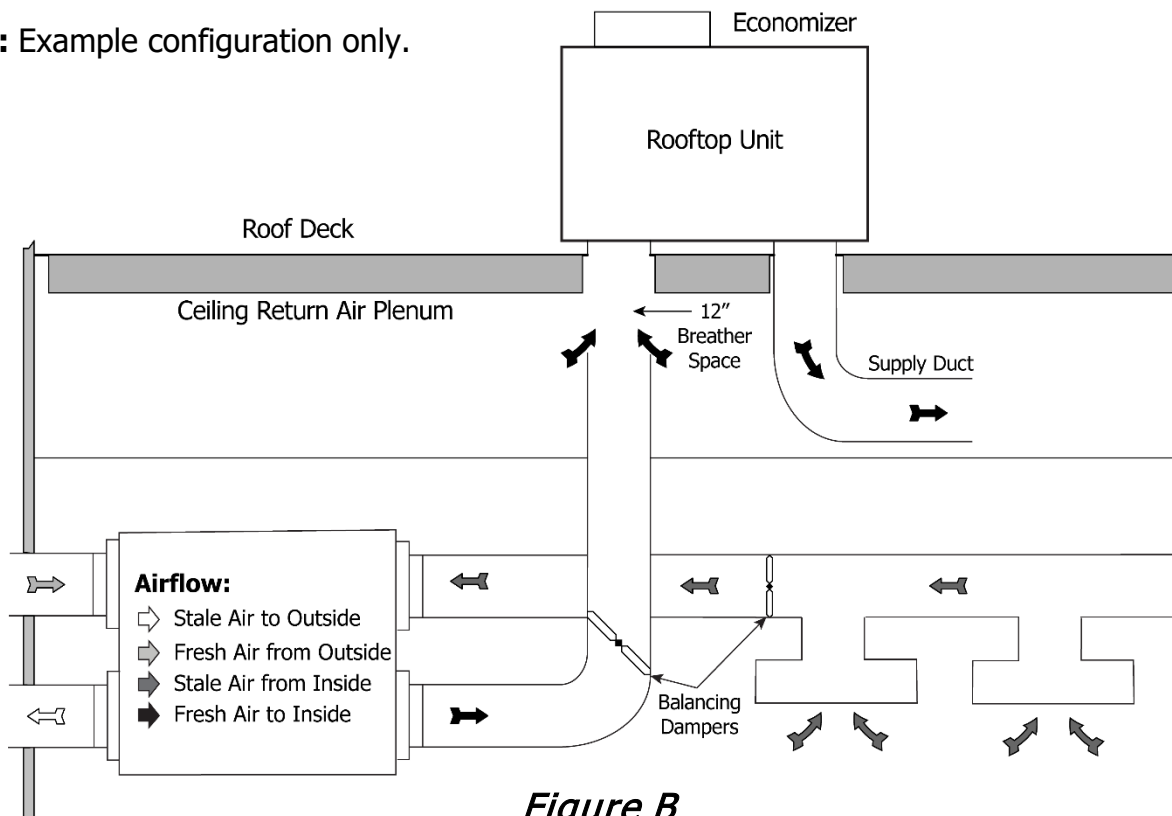

Many buildings have ceiling return air plenum as in Figure B. Fresh air from the ERV can be introduced directly into the ceiling space, but this should occur near the air handler's intake.

By operating the ERV on a 24 hour/7 day battery backed timer, the unit can be set to operate only when occupancy or indoor conditions require the air exchange.

In installations where it is satisfactory to provide general exhaust from the space, the air to be exhausted may be taken directly from the return air plenum to the ERV as it is drawn back to the air handler. Fresh air supplied by the ERV is then introduced directly into the return air plenum but at a location closer to the air handler. The air handler would have a constant running blower to effectively distribute the fresh air and remove the stale air. Balancing dampers would be in both the ERV supply and exhaust ducts between the return air plenum and the ERV.




Warning

- **At no time should the air handler Total External Static Pressure (TESP) on the return duct exceed that of the ERV.**
- **When interlocking a rooftop unit with an ERV take care to ensure the fans of both units operate in the correct rotation.**

7 STALE AIR RETURN AND FRESH AIR SUPPLY SYSTEM

Stale Air Return System

Many commercial activities produce air contaminants in the form of dusts, fumes, mists, vapors and gases. Contaminants should be controlled at the source, so that they are not dispersed through the building nor allowed to increase to toxic concentration levels. The heat recovery ventilator allows for economical operation of the HVAC system while effectively removing contaminants from the space. In designing the exhaust portion of the system, the exhaust grilles are placed to remove the contaminants while not allowing them to enter the breathing zone of the occupants.

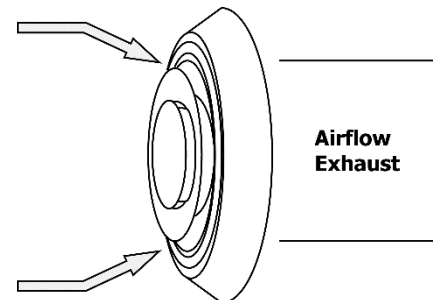

The stale air return system is used to draw air from the points in the building where the worst air quality problems occur. Balancing dampers and/or adjustable grilles are recommended on all return air lines which are used during installation to help balance the "draw" from different areas of the building. Note that the installation schematics show balancing dampers and/or adjustable grilles on all return air lines coming back to the unit.

For contaminants that are lighter than air, grilles should be located high on the wall. If contaminants are heavier than air, a lower placement of the grilles will be required. Information on a contaminants specific gravity and toxicity should be available from the chemical data sheets.


Alternately, the stale air may be drawn directly from the return air duct. When this system is used the air handler's blower will need to operate constantly when ventilation is required. The exhaust takeoff connection must be at least 3 ft (1 m) from a directly connected ERV supply duct if both are connected to the same duct run. Note and compensate for the static pressure of the air handlers return system if the static pressure of the return in the air handler exceeds 0.1 to 0.15 in. w.g.

A damper located just prior to the ERV is required to balance the stale air exhausted with the fresh air supply entering the building.

Return air suction points should be located at the opposite side of the room to the fresh air inlet. The inlets may be in the ceiling or high on the walls and fitted with inlet grilles.

Fresh Air Supply System

The fresh air supply ductwork from the ERV may be directly connected to the return air duct of the forced air system. When directly connected it is recommended that the air handler blower be in constant operation to move the fresh air about the building. Also, it is advisable to include a short length of fabric flex duct or other non-metallic connector in this hard ducted line in order to keep the ERV acoustically isolated and separately grounded (electrically) from the air handler. This will avoid a possible shock hazard to service people if a short to ground develops in one of the devices. It may be necessary to install a separate fresh air supply ductwork system if the heating is other than forced air.

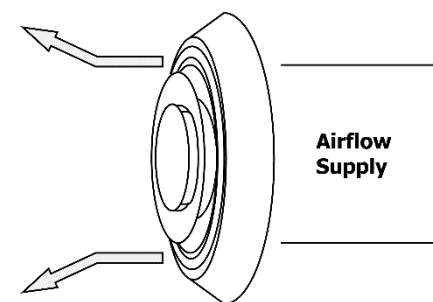

When installing an ERV, the designer and installer should be aware of local codes that may require smoke detectors and/or firestats in the HVAC or ERV ductwork. Because an ERV is designed to bring fresh air into the building, structures may require a supply voltage interrupt when smoke or flame sensors are triggered, or central fire alarm system is activated.

The use of balancing dampers or adjustable grilles as supply air diffusers and air exhaust grilles are recommended. TECHGRILLES™ are round, efficient, sound absorbing devices available in 4", 5", 6" and 8" (100, 125, 150 and 200mm).

Supply air grilles may be ceiling or high wall mounted. Avoid locating incoming fresh air grilles that could cause a direct draft on the occupants as the incoming air may be below room temperature. A reheat duct heater can be installed to improve occupant comfort.

8 WEATHERHOODS AND GRILLES

Outside Weatherhoods:

- The AIR-ERV-2650-EF units are shipped with 2 weatherhoods inside the cabinet which attach to the outer edge of the cabinet using the bolts provided. The weatherhoods have built-in screens to prevent foreign objects from entering in the ductwork through the outside hoods.
- The AIR-ERV-2650-EF require weatherhoods to be built elsewhere and provided by the contractor.

Recommended:

- no less than 10 ft. (3 m) apart from each other
- at least 18 in. (46 cm) above snow line or ground level
- away from sources of contaminants, such as automobile exhaust fumes, gas meters, garbage cans, containers, etc.
- not exposed to prevailing winds
- mesh screen with 1/4 in. (6.35 mm)
- the outside perimeter of the weatherhood must be caulked to prevent leakage into the building.
- the design and size of the weatherhoods or louvers chosen by the installer must allow for adequate free area. Water and debris penetration of the system is minimized when the airflow does not exceed 750 FPM (3.81 m/s) free area velocity.

Ducting from the Weatherhoods:

- Galvanized sheet metal ducting with sufficient cross section with an integral single piece vapor barrier should be used to connect the ERV to the weatherhoods.
- A minimum R value of insulation should be equal to 4 (RSI 0.75)
- A good bead of high quality caulking (preferably acoustical sealant) and taping with a high quality aluminum foil tape is recommended to seal the duct to both the ERV and the weatherhood.

Techgrilles:


- The use of balancing dampers or adjustable grilles as supply air diffusers and air exhaust covers are recommended. TECHGRILLES™ are round, efficient, sound absorbing devices available in 4", 5", 6" and 8" (100, 125, 150, and 200 mm) models.

Part# 99-EAG4 4" diameter Techgrille

Part# 99-EAG5 5" diameter Techgrille

Part# 99-EAG6 6" diameter Techgrille

Part# 99-EAG8 8" diameter Techgrille

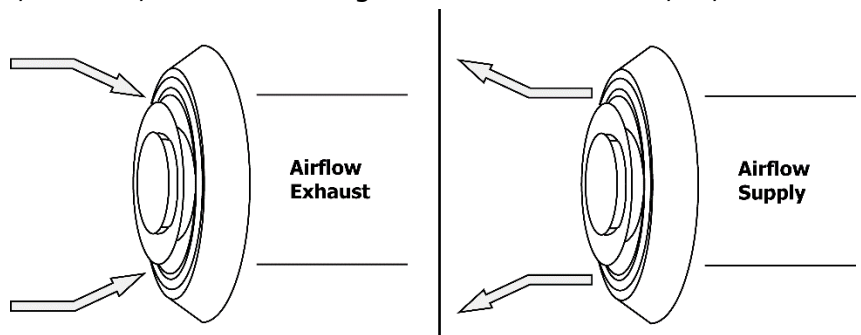

Attention

- **All ducting must meet UL Class 1 requirements.**
- **Design and install the fresh air intake in an area where the hoods will gather the freshest air.**
- **Do not use smaller mesh as it will be very susceptible to plugging up. Gravity dampers at the vents must not be used as they will restrict air flow and often "seize up".**


9 FUNCTION AND CONTROLS

Basic Functions

Speed control is obtained by powering 24V to one of the designated speed taps. Select appropriate operational speed by installing the jumper wire between one of the designated speed taps on the Thermostat terminal strip on the microprocessor board. A jumper wire is factory installed in the low speed position.

Speed	Jumper Wire Placement	
High	R	W
Medium	R	Y
Low (factory default)	R	G

Micro Processor Board

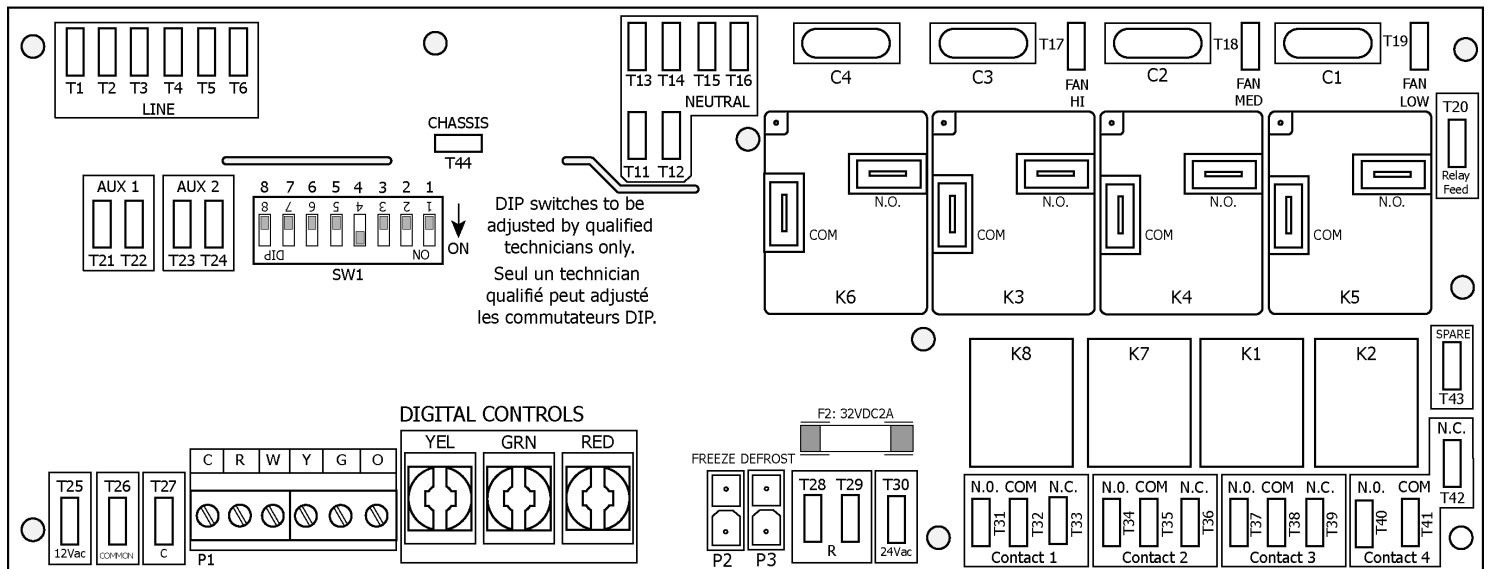

Optional Ventilation Control (99-GBC02, 99-GBC03, or 99-GBC04)

See [Page 17](#) for installation on circuit board.

Optional 3 Speed Control (99-500)

See [Page 18](#) for installation on circuit board.

Optional Wireless Timer (99-DET02)

See [Page 20](#) for installation.

Optional Wireless Repeater (99-RX02)

See [Page 21](#) for installation.

Optional 20/40/60 Minute Timer (99-DET01)

See [Page 22](#) for installation on circuit board.

Third Part Dry Contact Controls

Third part dry contact controls can be used with this unit. Connect the control as follows:

Example Controls

- Motion Sensors
- Time Clocks
- Switches

Speed	Terminals on Thermostat Block	
High	R	W
Low	R	G

10 MAIN WALL CONTROLS


Ventilation Wall Control (99-GBC02) Operating Instructions:

- (1) ON/OFF Button
- (2) Dehumidistat Button
- (3) Fan Button
- (4) Fan Speed Indicator
- (5) Humidity Setting
- (6) ON/OFF light

Turning on the Control:

Press the ON/OFF Button . The ON/OFF light will illuminate.



Setting the Ventilation Speed:


Press the Fan Button  to select LOW or HIGH fan speed. The corresponding indicator light will illuminate. If both LO and HI indicator lights are off, the fan is OFF, but will turn ON if required by the Dehumidistat or remote timer (if installed).

Humidity Control:

Your unit will reduce indoor humidity when outdoor humidity levels are lower than indoor humidity levels. This feature is only effective when the outdoor temperature is below 59°F (15°C).

Setting the Dehumidistat:

Press the Dehumidistat button  until the dehumidistat indicator light is at the desired humidity setting. After a few seconds the dehumidistat indicator light will either flash or be on continuously. A flashing light indicates the humidity level is higher than the humidity setting, and the unit is operating on high speed ventilation. A continuous light indicates the humidity level is lower than the humidity setting. The Dehumidistat will override the current speed setting to HIGH speed. The Dehumidistat function can be turned off by pressing the button  until the dehumidistat indicator light turns off.

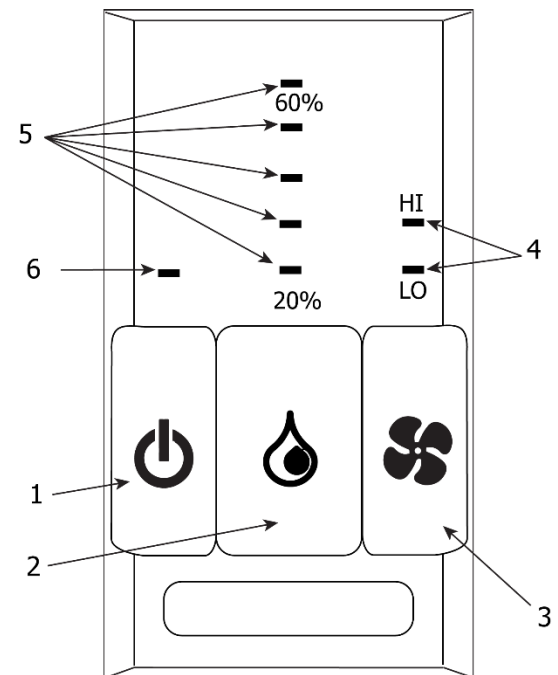

Attention


- **Only one main control can be installed on your system.**
- **Recirculation is not available on all models.**
- **Timers will not function when mode of operation is set to "OFF", unless specifically installed for the function. (See Installation Guide for other options.)**

10 MAIN WALL CONTROLS

Ventilation Wall Control (99-GBC03) Operating Instructions:

- (1) ON/OFF Button
- (2) Dehumidistat Button
- (3) Mode Button
- (4) Recirculation Mode Indicator
- (5) 20/40 Mode Indicator
- (6) Humidity Setting
- (7) LOW Fan Speed Indicator



Turning on the Control:

Press the ON/OFF Button . The LOW fan speed indicator will illuminate, and fan will turn to LOW speed.


Humidity Control:

Your unit will reduce indoor humidity when outdoor humidity levels are lower than indoor humidity levels. This feature is only effective when the outdoor temperature is below 59°F (15°C).


Setting the Dehumidistat:


Press the Dehumidistat Button  until the dehumidistat light is at the desired setting. After a few seconds the dehumidistat light will either flash or be on continuously. A flashing light indicates the humidity level is higher than the set point and that the unit is operating on HIGH speed ventilation. A continuous light indicates the humidity level is lower than the set point. The Dehumidistat will override the current speed setting to HIGH speed. The Dehumidistat function can be turned off by pressing the Dehumidistat Button  until the dehumidistat light turns off.

Setting the 20/40 Mode:

Press the Mode Button  until the 20/40 mode indicator light is illuminated. The 20/40 mode is a repeating cycle. The fan will run at LOW speed for 20 minutes, then turn OFF for 40 minutes. Some units are equipped to recirculate the air in your home during the 40-minute cycle with no ventilation. The control will automatically detect this feature and recirculate the air during the 40-minute cycle at LOW fan speed.

Recirculation Mode:

Some units are equipped to recirculate the air in your home without ventilating. Press the Mode Button  until the recirculation mode indicator light illuminates. Recirculation is in LOW speed.

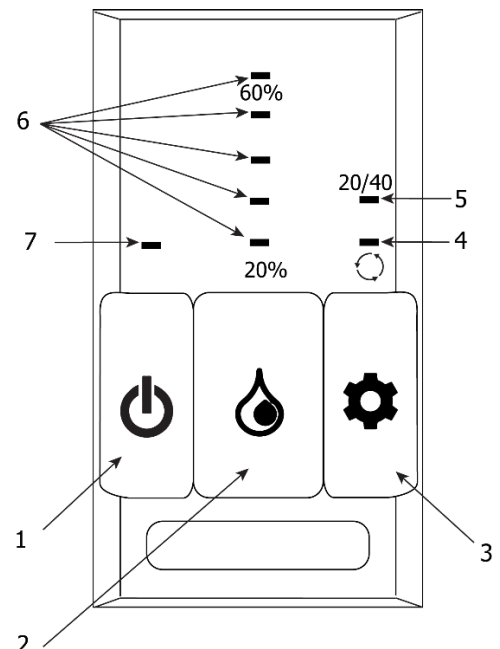

Attention


- Only one main control can be installed on your system.
- Recirculation is not available on all models.
- Timers will not function when mode of operation is set to "OFF", unless specifically installed for the function. (See Installation Guide for other options.)

10 MAIN WALL CONTROLS


Ventilation Wall Control (99-GBC04) Operating Instructions:

- (1) ON/OFF Button
- (2) 20/40 Button
- (3) Fan Button
- (4) Fan Speed Indicator
- (5) 20/40 Mode Indicator
- (6) ON/OFF Indicator

Turning on the Control:


Press the ON/OFF Button . The ON/OFF indicator light will illuminate.

Setting the Ventilation Speed:

Press the Fan button  to select LOW or HIGH fan speed. The corresponding indicator light will illuminate. If both LO and HI indicator lights are off, the fan is OFF, but will turn ON if required by a remote timer (if installed).

Setting the 20/40 Mode:

After a fan speed has been selected, press the 20/40 button. The 20/40 mode indicator light will illuminate. The 20/40 mode is a repeating cycle. The fan will run at LOW or HIGH speed for 20 minutes, then turn OFF for 40 minutes. Some units are equipped to recirculate the air in your home during the 40-minute cycle with no ventilation. The control will automatically detect this feature and recirculate the air during the 40-minute cycle at the selected fan speed.

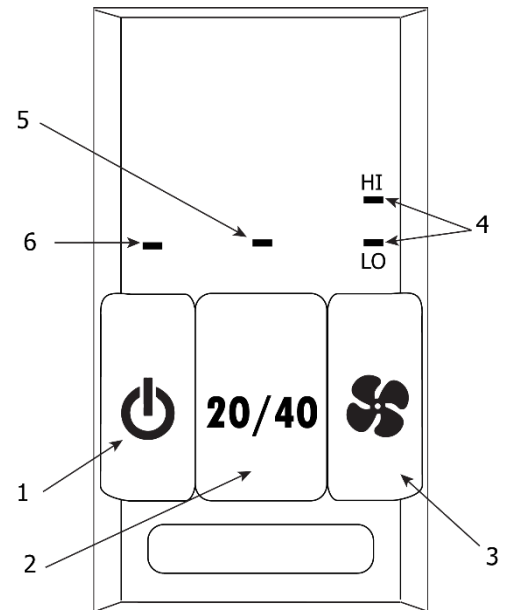

Attention

- **Only one main control can be installed on your system.**
- **Recirculation is not available on all models.**
- **Timers will not function when mode of operation is set to "OFF", unless specifically installed for the function. (See Installation Guide for other options.)**

10 MAIN WALL CONTROLS

The 99-GBC02, 99-GBC03, 99-GBC04 ventilation controls may either be installed onto a flush mounted electrical switch box or surface mounted onto a wall. Only one main control should be installed into a ventilation system.

Installation:

1. Carefully separate the face plate and the back plate by firmly pulling it apart. Keep the top/bottom vent openings clear (figure A).
2. Position the back plate in the desired location on the wall and mark the wall for the desired screw holes (figure B).
3. For mounting the main control without a Decora plate, break off the top and bottom tabs than position the back plate in the desired location on the wall and mark the wall for the desired screw holes (figure C)
4. Remove the back plate from the wall and mark the hole for the wires centered between the two screw holes (figure B or C).
5. Drill two 1/8 in. holes for the screws and wall anchors and drill one 1 in. x 0.75 in. hole for the wires.
6. Pull the 3 wire 20 gauge (min.), 100 ft length (max.), through the opening in the wall.
7. Connect the wires to the R, G, and Y terminals on the back plate (figure B or C).
8. Using the two supplied screws and anchors, install the back plate on the wall.
9. Attach the face plate to the back plate (figure A).
10. Connect the 3 wire 20 gauge (min.), 100 ft length (max.), to the RED, GRN, and YEL terminal on the Digital Controls terminal strip on the Aircom circuit board (figure D).

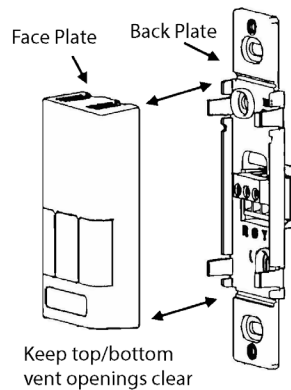


Figure A

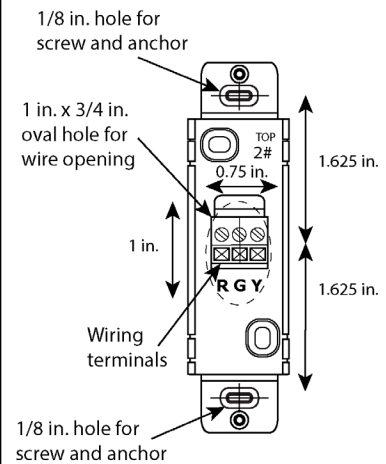


Figure B

Alternate Wall Mount

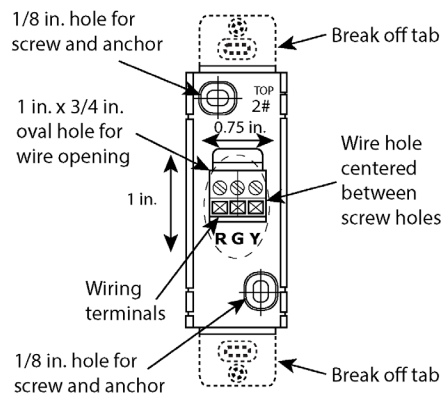


Figure C

DIGITAL CONTROLS

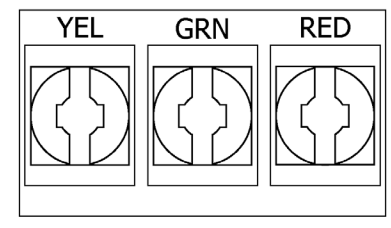


Figure D



Attention


- Use care when separating or attaching the face plate to avoid damaging the contact pins.

10 MAIN WALL CONTROLS

3-Speed Control (99-500) Operation:


- (1) High Speed Fan
- (2) Medium Speed Fan
- (3) Low Speed Fan

Press the applicable Fan Speed button to set the fan speed. Press the applicable OFF button in order to turn the Fan Speed control off.

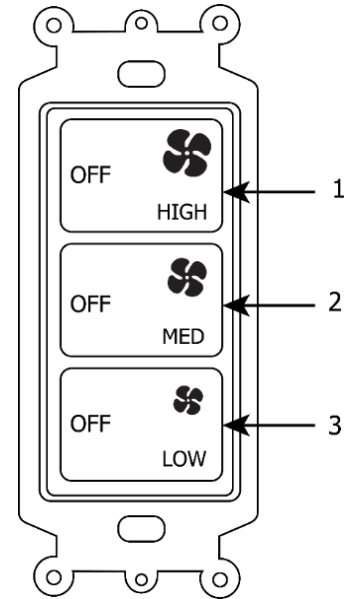


3-Speed Control (99-500) Installation:

Connect the wires to the R, W, Y, and G terminals on the Aircom circuit board as shown.

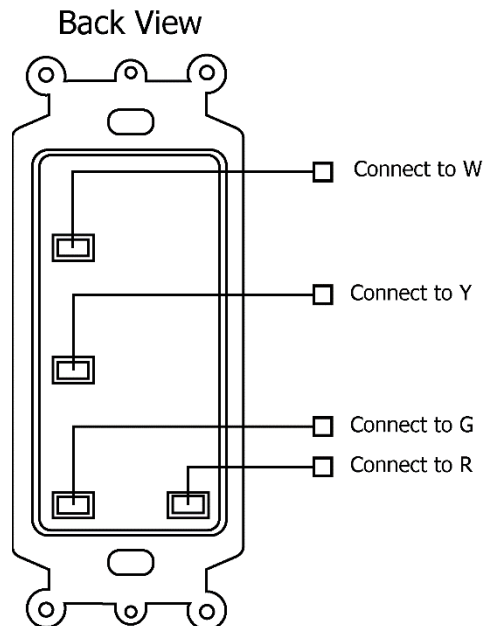

Circuit Board

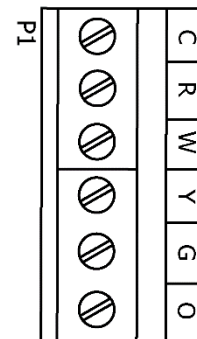

Attention

- Use 4 wire; 20-gauge wire (minimum)
- When used in conjunction with the 99-GBC02, the GBC02 control must be ON for the 99-500 control to operate. The 99-GBC02 will override the 99-500 control when the Dehumidistat is operating or the control is set to HIGH speed

11 TIMERS AND REPEATERS


20/40/60 Minute Wireless Timer (99-DET02) Operation:

- (1) Select Button
- (2) 20/40/60 minute status lights
- (3) Red LED battery indicator

Press the Select Button on the timer to initiate high speed ventilation for 20, 40, or 60 minutes. The 20/40/60 minute status lights indicate high speed operation. To cancel the high speed fan operation, press the Select Button until the 20/40/60 minute status lights are no longer illuminated.


When the battery in the timer needs to be replaced, the red LED Battery Indicator will illuminate.

When paired to the digital wall control, the wireless timer may be moved to a remote location in the home such as a bathroom. Wireless timers have an estimated range of 40 ft with no obstructions

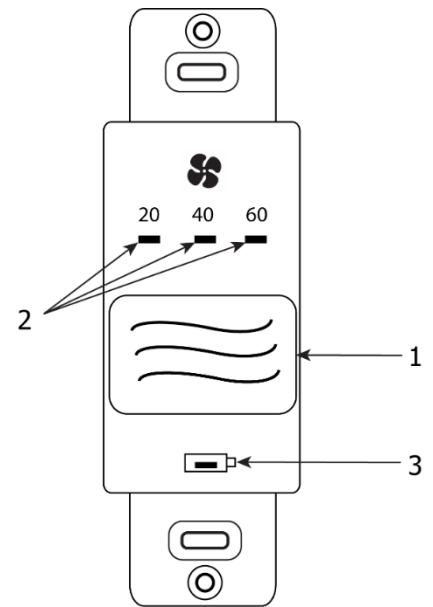

Replacing the Timer Battery (99-DET02):

- (4) Battery
 - (5) Face plate
 - (6) Back plate
- a) Remove the face plate by separating it from the back plate. On the back of the face plate the battery will be exposed.
 - b) Replace the battery and re-attach the face plate to the back plate.

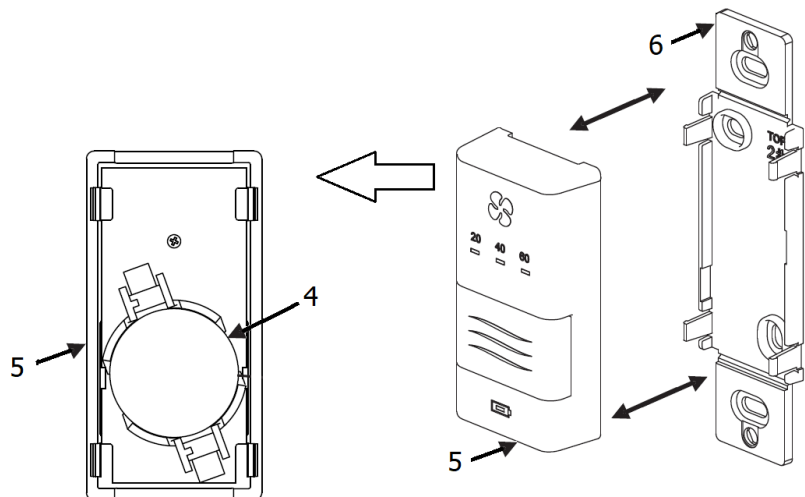

Attention






- Be careful not to damage the tabs on the back plate when re-attaching the face plate.

11 TIMERS AND REPEATERS

Wireless 20/40/60 Minute Timer (99-DET02)

The timers may be installed onto a flush mounted electrical switch box or it may be surfaced mounted onto a wall.

Pairing:

1. Remove the battery from the back of the timer, if installed.
2. Press the ON/OFF Button  on the main control to turn it on.
3. **GBC02, GBC03, or GBC04:** Press the left and right buttons ( or  or ) simultaneously on the main control. The bottom row LEDs will begin flashing. This indicates the main control is now in pairing mode.
4. Keep the timer within 16 in. of the main control when pairing.
5. Install the battery into the remote timer. The four lights will immediately flash five times. The red battery light will remain on for 12 seconds, then the 40 minute status light will flash. The 20, 40, and 60 minute status lights will flash for up to 30 seconds and then stop.
6. Press the Power Button  on the main control to exit pairing mode.
7. Press the Select Button on the timer to test that pairing was successful (figure A).
 - If the ERV initiates HIGH fan speed ventilation, pairing was successful.
 - If the ERV does not initiate HIGH fan speed ventilation, pairing was not successful. Un-pair the timer and return to step 1 of the pairing procedure and restart the pairing process.
8. Pair additional timers as necessary by repeating steps 1 through 8.

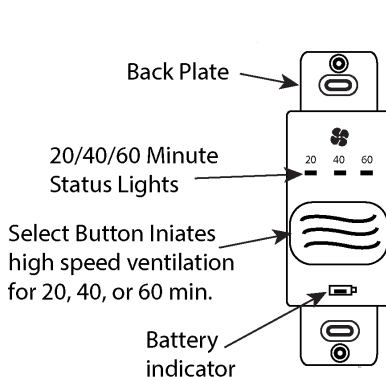


Figure A

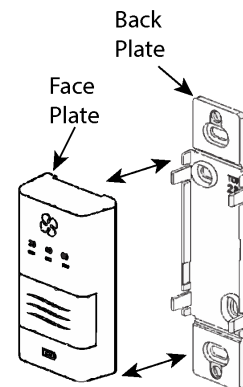


Figure B

Alternate Wall Mount

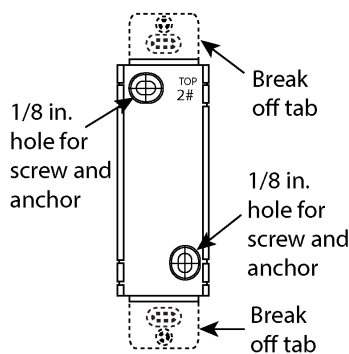


Figure C

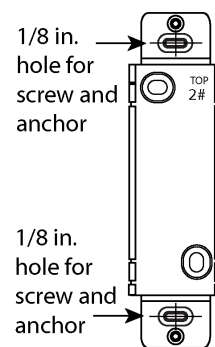


Figure D

Un-pairing:

1. Remove the battery from the back of the timer.
2. Press and hold the Select Button on the front of the timer (figure A).
3. While holding the Select Button, reinstall the battery in the timer. Continue holding the Select Button until the 20, 40, and 60 minute status light begins flashing (this can take up to 30 seconds). The timer will now be unpaired with the main control (figure A).

Installation:

1. Separate the face plate from the back plate by firmly pulling apart (figure B).
2. For mounting the main control without a Decora plate, break off top and bottom tabs (figure C).
3. Place the back plate of the main control in the desired location on the wall and pencil mark the top and bottom screw holes. Drill two 1/8" holes (figure C or D).
4. Attach the back plate to the wall using the two supplied screws and anchors.
5. Attach the face plate to the back plate (figure B).



Attention


- **The wireless timers and repeaters must be paired to the main control of the ERV. This process is called "Pairing". Multiple timers and repeaters can be paired to the main control.**

11 TIMERS AND REPEATERS

99-RX02 Repeater

- (1) Green LED
- (2) Red LED
- (3) Power Plug



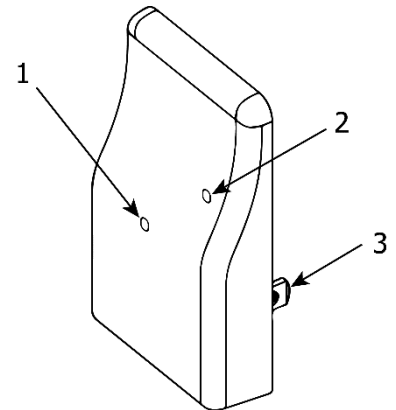


The wireless repeater is used to extend the range of the 99-DET02 wireless timers. The repeater plugs directly into a 120V power outlet. The 99-RX02 repeater wirelessly connects to the main wall control as well as the 99-DET02 wireless timers.



The 99-RX02 repeater should be installed at the halfway point between the 99-DET02 wireless timer and the main wall control if the timer is out of range. The LED will indicate the repeater's connection strength to the main wall control per the table below. Re-adjust the repeater's position as necessary.

LED Colour	Connection	Action
Solid Green	Good	No further adjustments are required.
Flashing Green	Moderate	The repeater will function properly but shouldn't be moved further away from the main control.
Red	Bad	The repeater needs to be moved closer to the main control.

Pairing:

1. Turn on the main control by pressing the ON/OFF button .
2. **GBC02, GBC03 or GBC04 control:** Press the left and right buttons simultaneously on the main control ( and  or ). The bottom row LED's will begin flashing. This indicates that the main control is now in pairing mode.
3. The RX02 Repeater must be powered within 16 in. of the main control for pairing. If an outlet is not available an extension cord should be used to power the Repeater initially for pairing.
4. Plug the repeater into the power outlet. The green light will flash after approximately 12 seconds indicating that the repeater is paired with the main control.
5. Press the ON/OFF button  on the main control to exit pairing mode and the repeater may now be unplugged and moved to its permanent location.
6. To pair additional repeaters with the same main control, repeat steps 1 through 5 until all repeaters have been paired.



Attention

- The repeaters are to be plugged directly into a 120V power outlet.

11 TIMERS AND REPEATERS


20/40/60 Minute Timer (99-DET01) Operation:

- (1) Select Button
- (2) 20/40/60 minute status lights

Press the Select Button on the timer to initiate high speed ventilation for 20, 40, or 60 minutes. The 20/40/60 minute status lights indicate high speed operation.


Lockout mode is useful if you wish to disable the timer:

- Enable Lockout Mode by holding the Select Button for 5 seconds.
- Disable Lockout Mode by holding the Select Button for 5 seconds.

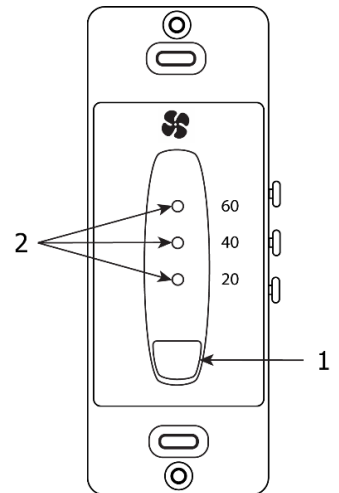


20/40/60 Minute Timer (99-DET01) Installation:

Connect the wires from the Y, R, and G terminals on the timer to the YEL, RED, and GRN terminals on the circuit board as shown.

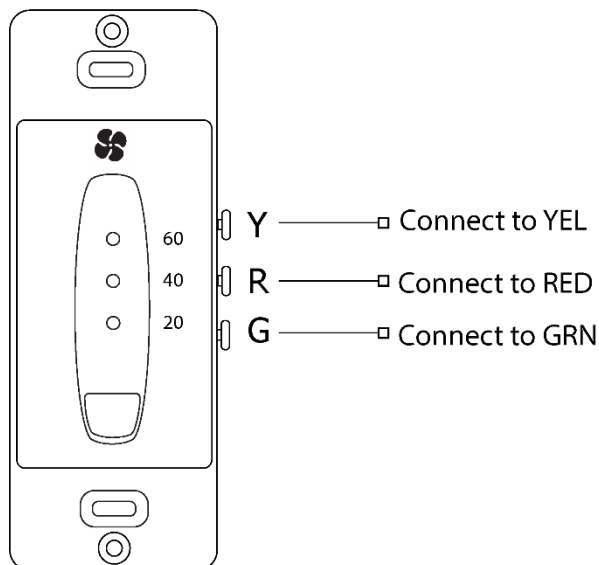

Circuit Board

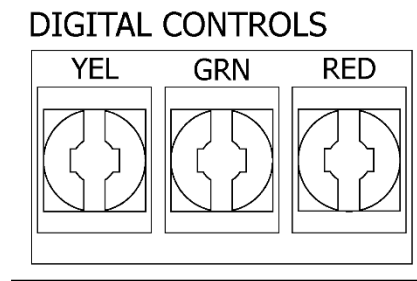

Note

- **Timers mount in standard 2" x 4" electrical boxes.**
- **Wire multiple timers individually back to the unit.**
- **Use 3 wire; 20-gauge wire (minimum)**

12 AIRCOM RELAYS & INTERLOCKING TO A FURNACE/AIR HANDLER

The circuit board has three available "dry contact" relays. Contact 3 is not available. Maximum 115V, 10 amp resistive load.

Contact 1


These relays initiate whenever the ERV is in defrost.

Contact 2 and 4

These relays initiate whenever the ERV fans are operating.

- Use contact 2 or 4 to interlock the ERV to an Air Handler or Furnace.

Note: Connecting the ERV as illustrated will ensure the Air Handler Blower Motor is operating whenever the ERV is ventilating.


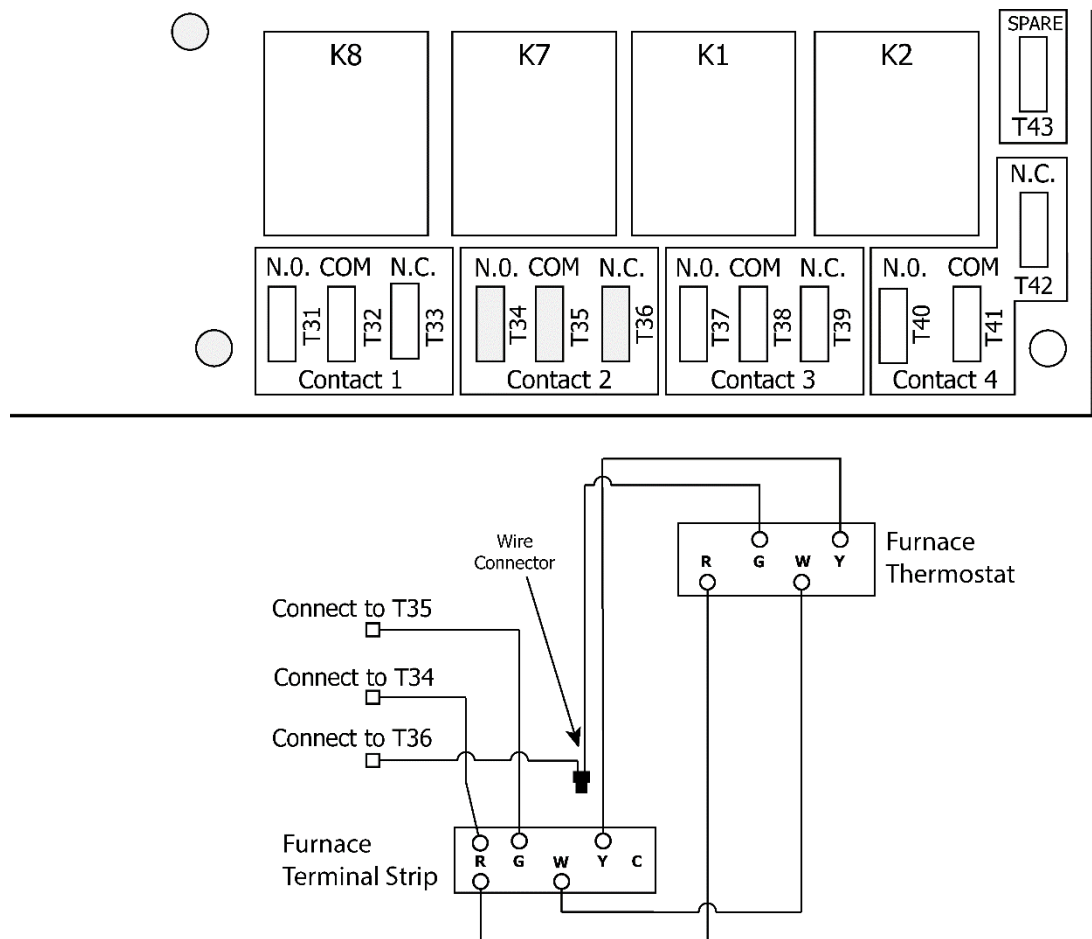


Caution

- Consideration must be given to competing air flows when connecting the ERV in conjunction with an Air Handler/Furnace Blower system.

13 ADJUSTING THE AIRFLOW

The factory wired motor speeds are High and Low. You may change the factory setting to High and Medium. The High/Medium Setting can be achieved by switching the RED-LOW and BLUE-MED wires on each motor.

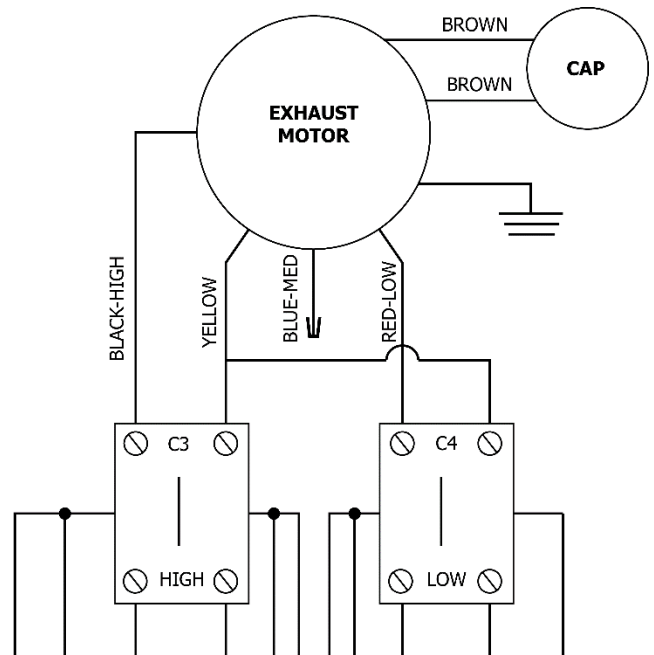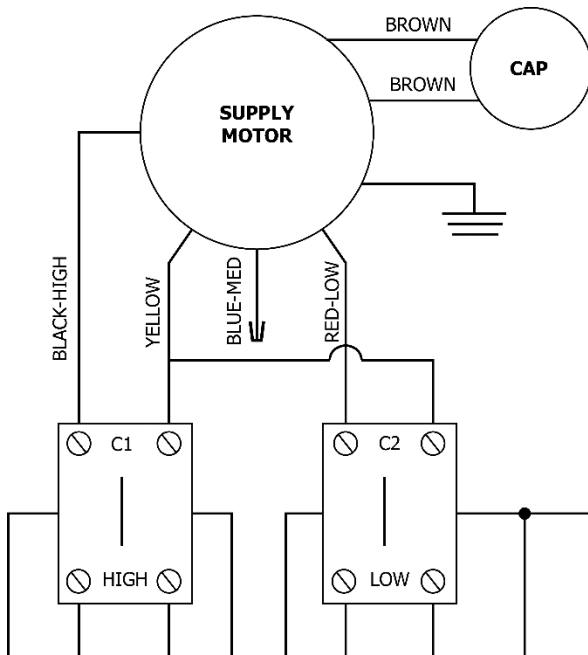

Warning

- Low speed will not be available if this change is made.


14 FAN DEFROST

The AIR-ERV-2650-IF/AIR-ERV-2650-EFD units are equipped with an electronically controlled fan defrost system to remove frost that collects on the warm air side of the aluminum heat transfer surfaces of the heat exchanger core. When the outside temperature drops below 27°F (-3°C), a defrost timer is activated which provides for an automatic defrost cycle. During the automatic defrost cycle, the fresh air supply is shut off while the exhaust fan continues to operate. This allows warm inside air to flow over the heat exchanger core, melting any frost accumulation. After the defrost period, the fresh air supply fan automatically returns to the normal speed and fresh outside air continues to be drawn into the building. Water from the melted frost collects in the bottom drip pans and drains out through the bottom drain connections. The defrost cycle repeats automatically until the outdoor air temperature rises above 27°F (-3°C).

- If the indoor air temperature is too low, the defrost time may need to be increased.
- The unit must be mounted level (horizontal) to obtain proper drainage of water from the heat exchange cores and drip pans. The warranty will be void if these conditions are not met.

Defrost Time Adjustment


DIP switch #8 (located on the Aircom circuit board) will adjust the defrost time. Do not change to any other DIP switch configuration.

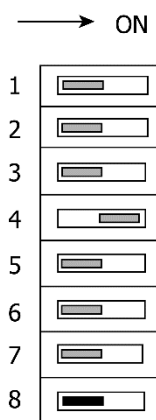

Factory Setting (DIP switch #8 OFF)

The sequence of events for this defrost mode at 27°F (-3°C) is:

1. Both fans will stop for one minute.
2. The ERV exhaust motor will initiate and operate for 4 minutes.
3. Both ERV motors (exhaust and intake) will operate for 30 minutes.
4. The cycle repeats.

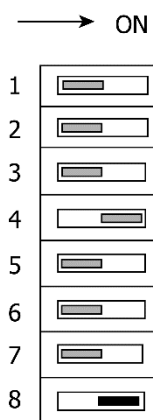

Increased Defrost Time (DIP switch #8 ON)

Cooler climates may require a more aggressive defrost cycle:

1. Both fans will stop for one minute.
2. The ERV exhaust motor will initiate and operate for 4 minutes.
3. Both ERV motors (exhaust and intake) will operate for 20 minutes.
4. The cycle repeats.



Caution

- **Change DIP switch only as illustrated on this page. Do not adjust any other switches.**

15 BALANCING THE AIRFLOWS

It is necessary to have balanced air flows in an ERV. The volume of air brought in from the outside must equal the volume of air exhausted by the unit. If the air flows are not properly balanced, then;

- The ERV may not operate at its maximum efficiency
- A negative or positive air pressure may occur in the building
- The unit may not defrost properly
- Failure to balance ERV properly may void warranty

Read the Application Warning on the front of this manual!

Prior to balancing, ensure that:

1. All sealing of the ductwork system has been completed.
2. All the ERV's components are in place and functioning properly.
3. Balancing dampers are fully open.
4. Unit is on HIGH speed.
5. Air flows in branch lines to specific areas of the house should be adjusted first prior to balancing the unit. A smoke pencil used at the grilles is a good indicator of each branch line's relative air flow.
6. After taking readings of both the stale air to the ERV duct and fresh air to the house duct, the duct with the lower CFM ([L/s] velocity) reading should be left alone, while the duct with the higher reading should be adjusted back to match the lower reading.
7. Return unit to appropriate fan speed for normal operation

Balancing Procedure

The following is a method of field balancing an ERV using a Pitot tube, advantageous in situations when flow stations are not installed in the ductwork. Procedure should be performed with the ERV on high speed.

1. The first step is to operate **all** mechanical systems on high speed, which have an influence on the ventilation system, i.e. the ERV itself and the forced air furnace or air handler if applicable. This will provide the maximum pressure that the ERV will need to overcome and allow for a more accurate balance of the unit.
2. Drill a small hole in the duct (about 3/16"), three feet downstream of any elbows or bends, and one foot upstream of any elbows or bends. These are recommended distances, but the actual installation may limit the amount of straight duct.
3. The Pitot tube should be connected to a manometer capable of reading 3 digits of resolution. The tube coming out of the top of the pitot is connected to the high pressure side of the gauge. The tube coming out of the side of the pitot is connected to the low pressure or reference side of the gauge. Insert the Pitot tube into the duct; pointing the tip into the airflow.
4. For general balancing it is enough to move the pitot tube around in the duct and take an average or typical reading. Repeat this procedure in the other (supply or return) duct.
5. Determine which duct has the highest airflow (highest reading on the manometer).
6. Adjust the higher airflow adjusting the field supplied damper. The flows should now be balanced. Actual airflow can be determined from the gauge reading. The value read on the gauge is called the velocity pressure. The Pitot tube comes with a chart that will give the air flow velocity based on the velocity pressure indicated by the gauge. This velocity will be in either feet per minute or meters per second. To determine the actual airflow, the velocity is multiplied by the cross sectional area of the duct being measured.



Attention

- **Continuous, excessive, positive pressure may drive moist indoor air into the external walls of the building. Once inside the external walls, moist air may condense (in cold weather) and degrade structural components or cause locks to freeze.**
- **Continuous, excessive, negative pressure may have several undesirable effects. In some geographic locations, soil gases such as methane and radon gas may be drawn into the home through basement or ground contact areas and may also cause the backdrafting of vented combustion equipment.**

15 BALANCING THE AIRFLOWS

Example:

This is an example for determining the airflow in a 6 in. (0.5 ft) duct.

- The Pitot tube reading was 0.025 inches of water. From the chart, this is 640 ft/min.

The 6 in. (0.5 ft) duct has a cross sectional area of:

$$A = \pi r^2 = [\pi d^2] / 4$$

$$A = [3.14 \times (0.5 \text{ ft})^2] / 4$$


$$A = 0.2 \text{ ft}^2$$

The airflow is then: (640 ft./min.) x (0.2 ft²) = 128 cfm

For your convenience, the cross sectional areas of some common duct sizes are listed below:

DUCT. DIAM. (inches)	CROSS SECTION AREA (sq. ft.)
5 (127 mm)	0.14
6 (152 mm)	0.20
7 (178 mm)	0.27

The accuracy of the air flow reading will be affected by how close to any elbows or bends the readings are taken. Accuracy can be increased by taking an average of multiple readings as outlined in the literature supplied with the Pitot tube.

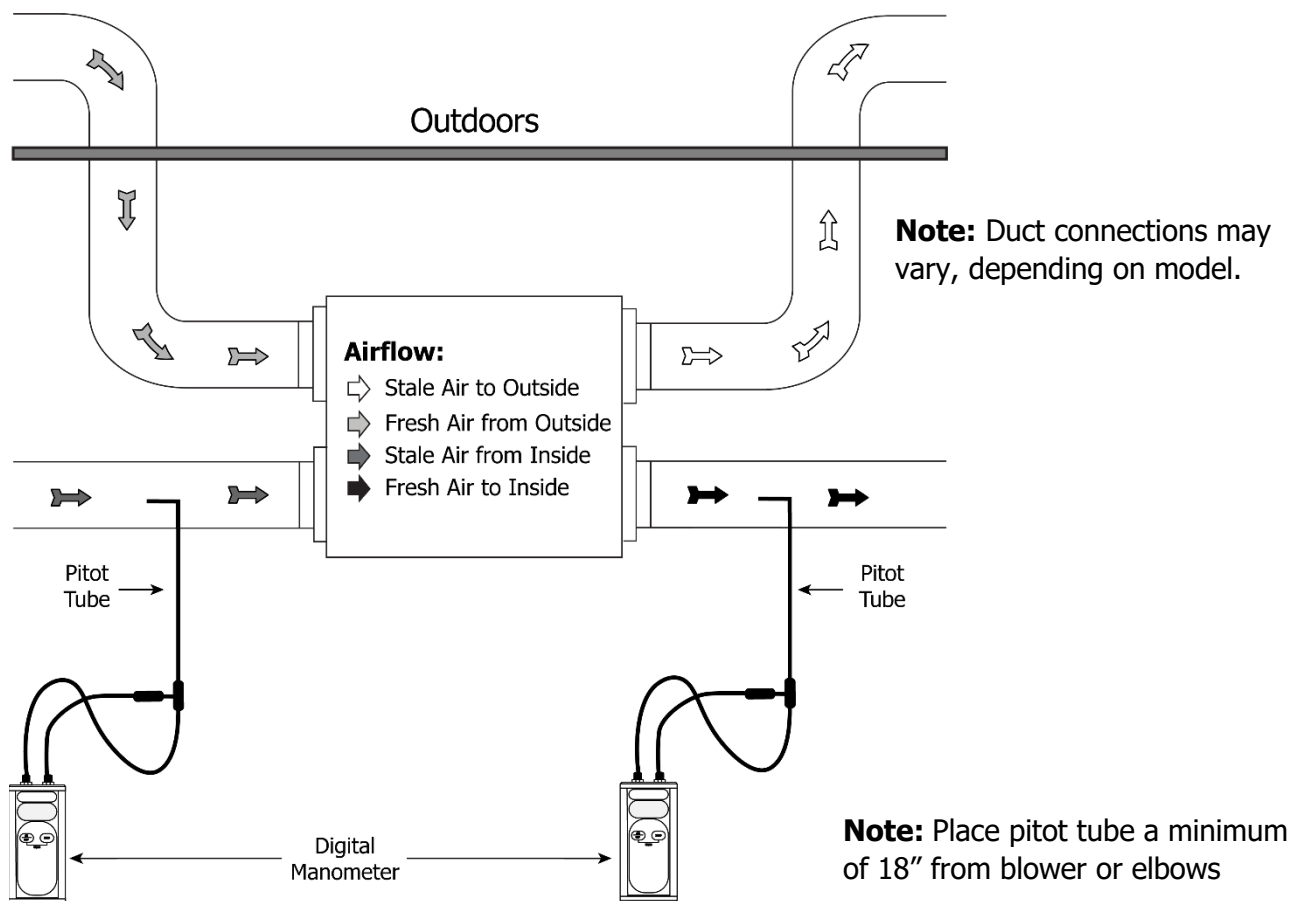


16 SERVICE AND MAINTENANCE (2650 UNITS)

A dedicated maintenance program will prolong the life of the equipment and maintain its optimum performance.

We recommend at least two (2) full inspections and cleanings per year under normal operating conditions and more if circumstances warrant it (i.e., situations of heavy smoke may require servicing every one to two months).

- (1) Heat Exchanger Core
- (2) Exhaust Hood c/w Bug Screen
- (3) Motors (two)
- (4) Roof Curb
- (5) Supply Duct 24" x 16"
- (6) Drain Pans (two)
- (7) Exhaust Duct 24" x 16"
- (8) 4" Filters (two)
- (9) Supply Hood c/w Bug Screen

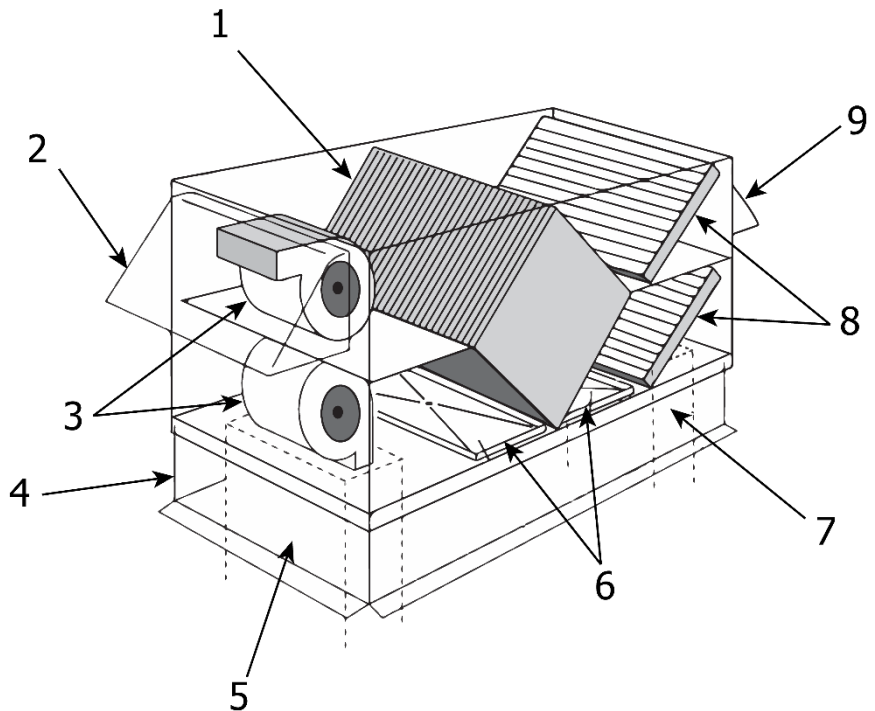

Services should include:

- Cleaning of screens protecting outside hoods.
- Cleaning of core (see below).
- Inspect filters and replace as necessary.
- Wipe down drain pans and inside of cabinet using a mild disinfectant.
- Ensure condensate drain has free flow of moisture.
- Inspect operation of blowers and electric panel.
- Confirm operation.

ERV Core

Remove core(s) and vacuum or use low pressurized air to clean core(s). Do not wash or submerge in water. With the core(s) in its proper position, place the bottom corner into its guide rail support, then place the left side, the right side and finally the top corner into place in the same fashion. Once the core(s) is in place, push the core evenly into the cabinet until it reaches the back. Note the core(s) will protrude slightly out from the front of the cabinet, this is so the access doors, when closed, ensures a tight fit.

17 TROUBLESHOOTING

Refer to the following table for troubleshooting the ERV unit.

Table 17.1 – Troubleshooting Procedures

SYMPTOM	CAUSE	SOLUTION
Poor airflows	<ul style="list-style-type: none">• 1/4 in. (6mm) mesh on outside hood is plugged• Filters plugged• Core obstructed• House grilles closed or blocked• Dampers are closed if installed• Poor power supply at site• Ductwork is restricting ERV• Improper speed control setting• ERV airflow improperly balanced	<ul style="list-style-type: none">• Clean exterior hoods or vents• Remove and clean filter• Remove and clean core• Check and open grilles• Open and adjust dampers• Have electrician check supply voltage• Check duct installation• Increase the speed of the ERV• Have contractor balance ERV
Supply air feels cold	<ul style="list-style-type: none">• Poor location of supply grilles, the airflow may irritate the occupant• Outdoor temperature extremely cold	<ul style="list-style-type: none">• Locate the grilles high on the walls or under the baseboards, install ceiling mounted diffuse or grilles so as not to directly spill the supply air on the occupant (i.e. over a sofa)• Turn down the ERV supply speed. A small duct heater (1 kW) could be used to temper the supply air• Placement of furniture or closed doors is restricting the movement of air in the home• If supply air is ducted into furnace return, the furnace fan may need to run continuously to distribute ventilation air comfortably

17 TROUBLESHOOTING


Refer to the following table for troubleshooting the ERV unit.

Table 17.1 – Troubleshooting Procedures (cont.)

SYMPTOM	CAUSE	SOLUTION
Humidity levels are too high condensation is appearing on the windows	<ul style="list-style-type: none"> Dehumidistat is set too high ERV is not sized to handle a hot tub, indoor pool etc. Lifestyle of the occupants Moisture coming into the home from an unvented or unheated crawl space Moisture is remaining in the washroom and kitchen areas Condensation seems to form in the spring and fall ERV is set at too low a speed 	<ul style="list-style-type: none"> Set Dehumidistat lower Cover pools, hot tubs when they are not in use Avoid hanging clothes to dry, storing wood and venting clothes dryer inside. Firewood may have to be moved outside Vent crawl space and place a vapor barrier on the floor of the crawl space Ducts from the washroom should be sized to remove moist air as effectively as possible, use of a bathroom fan for short periods will remove additional moisture On humid days, as the seasons change, some condensation may appear, but the homes air quality will remain high with some ERV use Increase speed of the ERV
Humidity levels are too low	<ul style="list-style-type: none"> Blower speed of ERV is too high Lifestyle of occupants ERV airflows may be improperly balanced 	<ul style="list-style-type: none"> Decrease ERV blower speed Humidity may have to be added using humidifiers Have contractor balance ERV airflows
ERV and/or ducts frosting up	<ul style="list-style-type: none"> ERV airflows are improperly balanced Malfunction of the ERV defrost system 	<ul style="list-style-type: none"> Note: minimal frost build-up is expected on cores before unit initiates defrost cycle functions Have HVAC contractor balance the ERV Ensure damper defrost is operating during self-test
Condensation or ice buildup in insulated duct to the outside	<ul style="list-style-type: none"> Incomplete vapor barrier around insulated duct A hole or tear in outer duct covering 	<ul style="list-style-type: none"> Tape and seal all joints Tape any holes or tears made in the outer duct covering, ensure that the vapor barrier is completely sealed
Excessive vibration	<ul style="list-style-type: none"> Dirt on fan wheels 	<ul style="list-style-type: none"> Have contractor service ERV


18 WIRING DIAGRAMS (AIR-ERV-2650IFD-208SP/AIR-ERV-2650IFD EFD-208SP)

CAUTION: ELECTRICAL CONTROL PANEL, SERVICE BY ELECTRICIAN ONLY

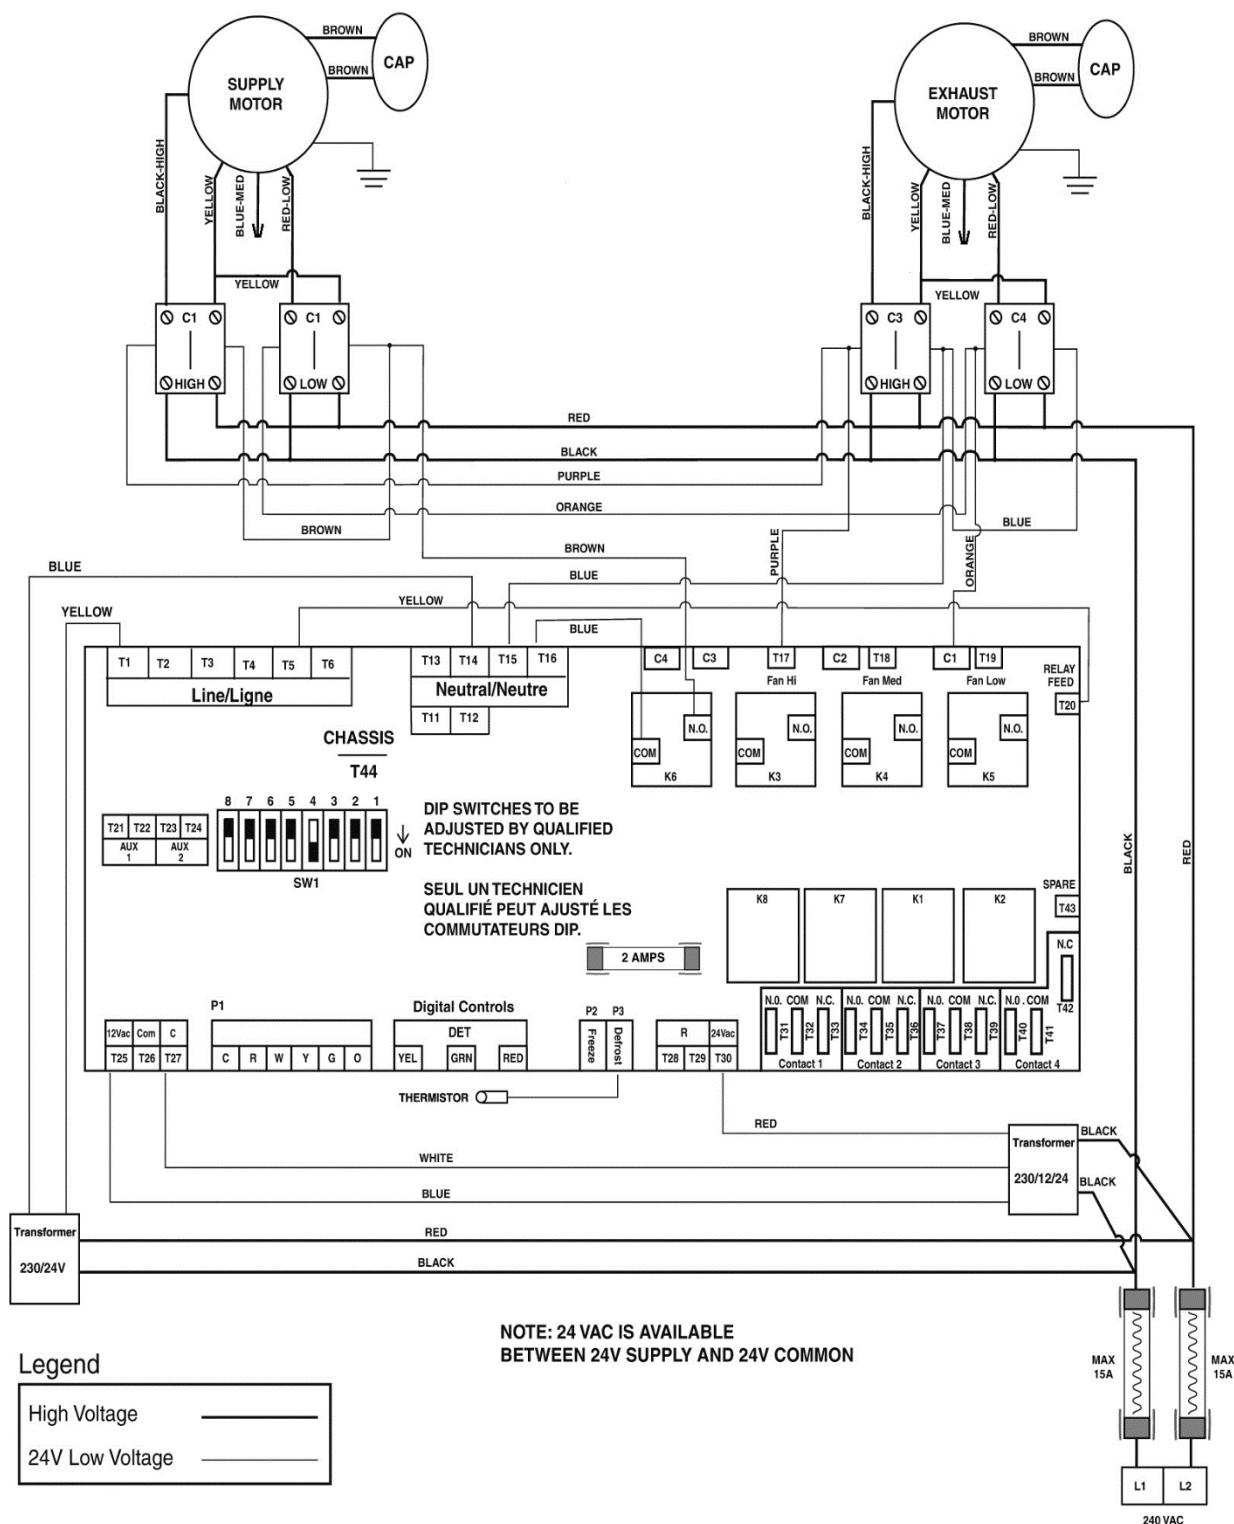

19 WIRING DIAGRAMS (AIR-ERV-2650IFD-240SP/AIR-ERV-2650IFD EFD-240SP)

CAUTION: ELECTRICAL CONTROL PANEL, SERVICE BY ELECTRICIAN ONLY

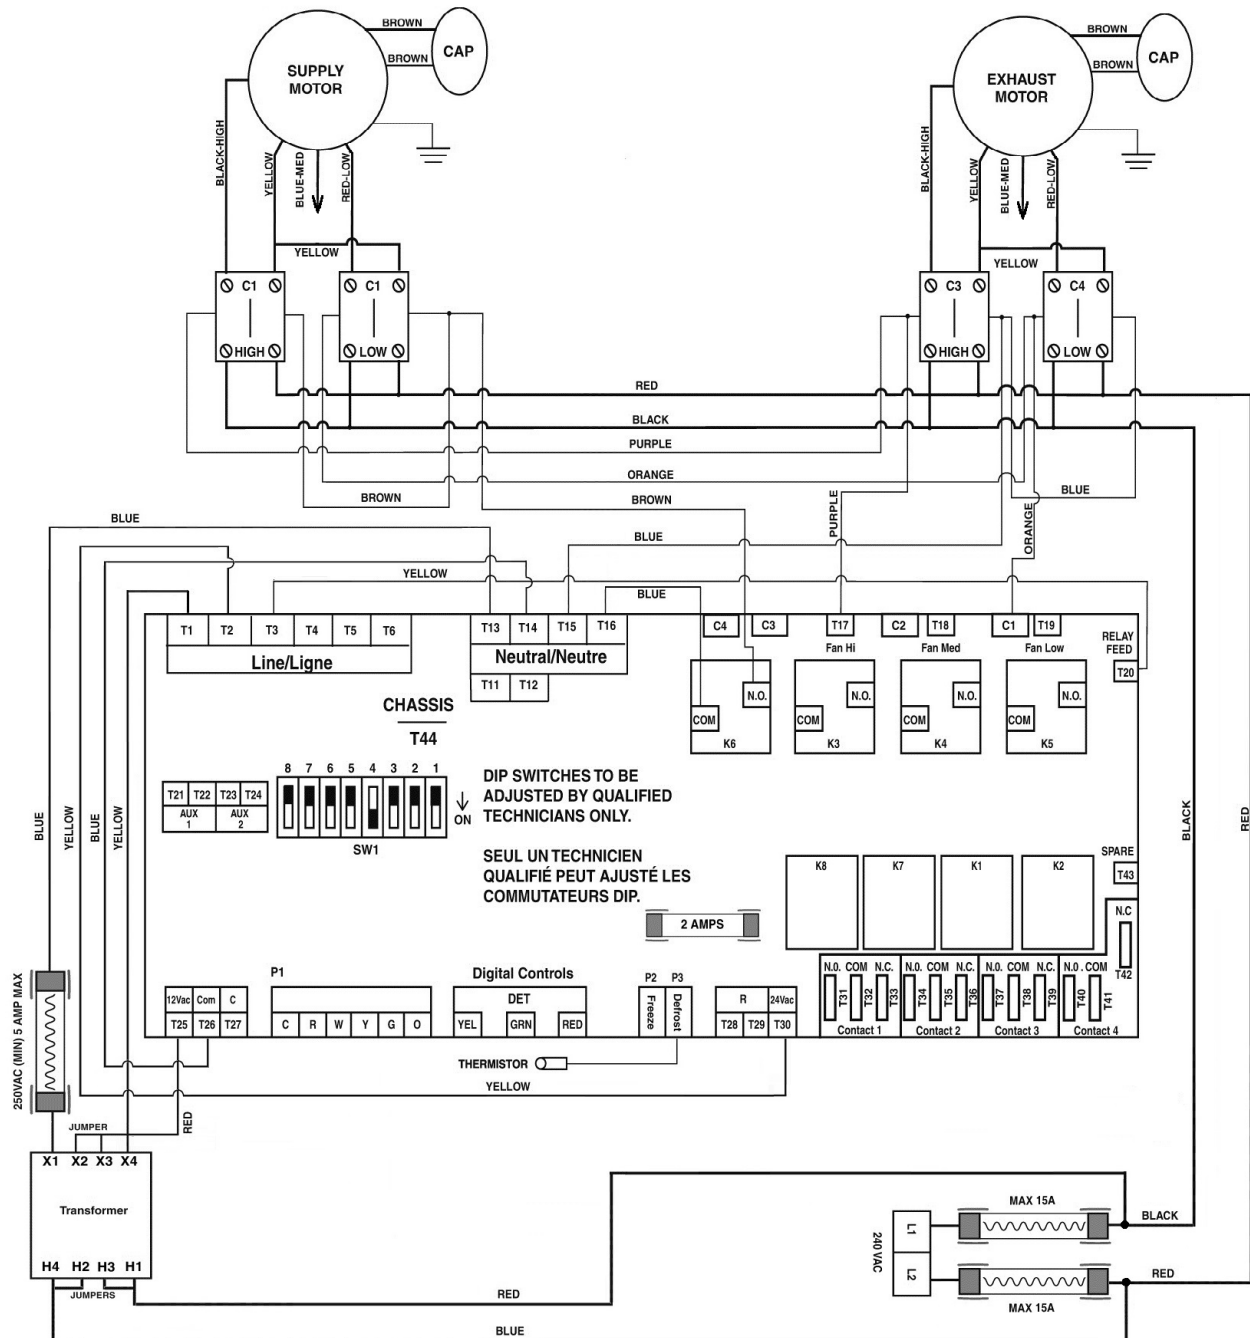

60-2500-W-208
REV. 04072025

20 WARRANTY

AIRIA BRANDS INC.® (AIRIA) warrants to the original purchaser of the AIRFLOW® model and accessories referred to below, to be free from manufacturing defects.

This Limited Warranty is personal to AIRIA® and is in effect from the installation date, but no later than 12 months after the date the product was manufactured (if the installation date cannot be verified, the warranty period will begin on the date of manufacture). The serial number can be used to determine the date of manufacture: XX XX MMDDYY ###; or MMDDYY ###. The warranty is dependent on the type of unit:

Type of Unit	Warranty
HRV Residential	Lifetime on the Core / 5 years on other components
HRV Commercial	15 years on the Core / 2 years on other components
ERV Residential	5 years on the Core / 5 years on other components
ERV Commercial	5 years on the Core / 2 years on other components
Accessories (e.g. controls and timers)	1 year
Replacement Parts (e.g. motor)	1 year
Clean Air Furnace (HRV)	Lifetime on the Core / 2 years on other components
Clean Air Furnace (ERV)	5 years on the Core / 2 years on other components
Air Handler	5 years
TFP	5 years

Damage resulting from all other causes, including but not limited to: lightning, hurricane, tornado, earthquake or any other acts of God; improper installation, modification, alteration or misuse of the AIRFLOW® unit or its operation in a manner contrary to the instructions accompanying the unit at the time of sale; accidental or intentional damage, neglect, improper care, or other failure by the owner to provide reasonable and necessary maintenance of the product; any attempt at repair by an unauthorized service representative or not in accordance with this warranty; or any other causes beyond the control of AIRIA®, are excluded from this warranty.

If you feel that the AIRFLOW® unit you purchased is not free from manufacturing defects, please refer to <https://www.lifebreath.com/homeowners-2/find-a-contractor/> to find the name of your nearest dealer in order to repair the product. The labour required to install any replacement part(s) is not covered by AIRIA®.

AIRIA® reserves the right to replace the entire unit or to refund the original purchase price in lieu of repair.

AIRIA® MAKES NO EXPRESS WARRANTIES, EXCEPT FOR THOSE SET FORTH HERIN AND SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES WITH RESPECT TO AIRFLOW® COVERED BY THIS WARRANTY. AIRIA'S COMPLETE LIABILITY AND THE OWNER'S EXCLUSIVE REMEDY BEING LIMITED TO REPAIR OR REPLACEMENT ON THE TERMS STATED HEREIN. ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED.

NO PERSON IS AUTHORIZED TO CHANGE THE WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY UNLESS SUCH CHANGES ARE MADE IN WRITING AND SIGNED BY AN OFFICER OF AIRIA®.

MODEL NO.: _____

UNIT SERIAL NO.: _____

INSTALLED BY: _____

DATE: _____